



(waterless urinals)

Integrated hygiene capsule ensures perfect hygienic conditions in the siphon

Easy-to-replace siphon cardridge with a sophisticated sealing system

Reliable odor membrane, automatically seals against sewer odors. Safe under positive and negative pressure. No cloggingg due to double-flap technology

Sediment inhibitor, minimizes sediment deposits in the drain pipe

Drain pipe

The unique double-flap membrane technology ensures **instantaneus drainage** of urine without leaving any residue



Daily cleaning 📂




Dissolve the contents of the sachet in 1ℓ of water. Shake the spray bottle at least 10 times



DOUBLE-FLAP MEMBRANE SIPHON:


Spray urinal with mixture, then brush

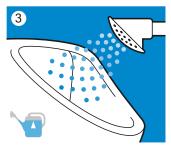

Rinse with cold water (at leat 5ℓ)



Use cold water only



Do not use warm or hot water



Use "Ökonal" cleaners solely



Do not use abrasives



Ökonal Waterless urinals

Do not use urinal blocks or toilet rim blocks



www.oekonal.com

Do not use cleaning rags, do not rub dry inside the urinals

